

## Quick start guide for the AWCN 14D washing machine

### Dear Customer!

The proper operation of the washing machine extends its life, therefore, remember that:

- the drum seal must be dry (do not close the door tightly after a wash)
- clean the washing agent with delicate cleaning agents, do not brush it with abrasive agents.

### 1. Preparing to wash

- Empty all pockets
- Fasten all zippers
- Put small objects in washing bags
- Open the door of the washing machine pressing the holder from the inside
- Put the segregated clothes into the washing machine



**Cotton – max full drum**

**Synthetics – max 1/2 of the drum**

**Silk, Wool – max 1/3 of the drum**

### 2. Add detergent

- Open the drawer for washing agents. Pull the holder.
- Pour a dose of the washing agent into the proper chamber as recommended by the manufacturer of the washing agent.
- Pour the conditioner (e.g. softener), select the detergent chamber
- Chamber for the washing agent for MAIN WASH. Applying the liquid washing agents, put in an insert constituting part of the washing machine's equipment in the chamber.
- Chamber for the softener and other special liquid washing agents.
- Chamber for the PRE-WASH AGENT.

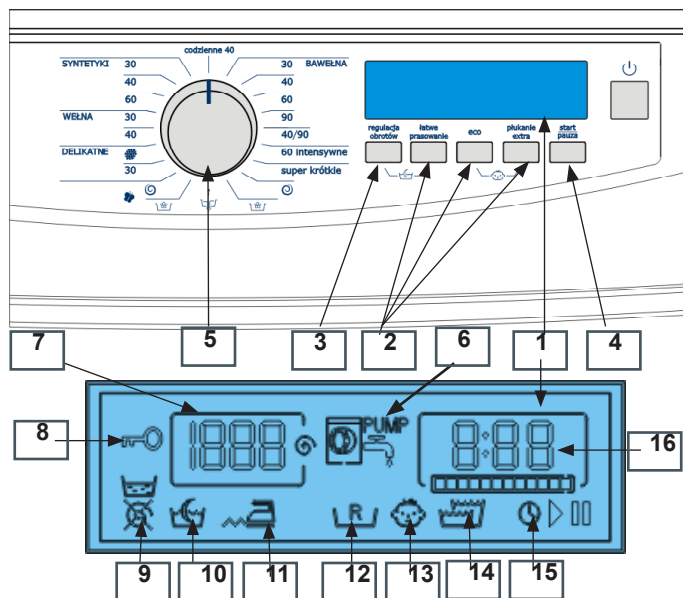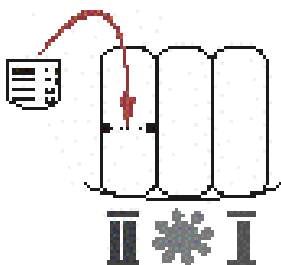

- [1] Display
- [2] Additional functions button
- [3] Regulation of rotations button
- [4] START/PAUSE button
- [5] Program selection knob
- [6] Error symbol
- [7] spin rotation regulation section
- [8] Door interlock
- [9] Function symbol - Turning off the spin
- [10] Function symbol – Quiet wash
- [11] Function symbol – Easy iron
- [12] Function symbol – Eco
- [13] Function symbol – Child Lock
- [14] Function symbol – Extra wash
- [15] Delayed wash symbol
- [16] Time section (the rough time to finish the wash or to start it)



#### CAUTION!

While activating the function and during the change of settings, press the button and keep it pushed for a short time (0.5 s). In order to protect the load, wash the delicate fabrics, silk, synthetics, wool, using programs designed for them exclusively. The above-mentioned fabrics should not be loaded in the amount greater than the recommended one, see page 2.



### 3. Selection of the wash programme

- Turn on the washing machine by pushing the  button

- The display will be light up



#### • Select the washing program

The washing programs and the temperature are described on the panel and in the “Washing programs table” SEE page 2

#### • Select additional functions


The additional functions are described on the panel and in the „Washing programs table”. The activation of this function is signalled on the display.

### 4. Select Start

- Push the “START/PAUSE” button once to start the washing cycle, or more than once to turn on the delayed washing.
- **Activation of the delayed washing**  
Push the “START/PAUSE” button, the washing time length and a  symbol of the start with a delay will flash. Within 5 seconds, each time the button is pushed, the delay is extended. Within 1 to 3 hours, it is possible to set the delay time every 30 minutes. Within 3-24 hours it is possible to set the delay time every hour. After 5 seconds from the last push of the button, the washing machine starts counting the delay time.  symbol of the start with a delay lighted up on the display. 1:30 means that wash will start in 1 hour and 30 minutes, 12 h means that the wash will start in 12 hours.

### 5. End of the wash

- The light “END” is on.

- The washing machine is turned off  (the display is not lighted).



**Caution! The next wash may be started only after the washing machine is switched off and then switched on again.**

- Open the door of the washing machine
- Remove the clothes from the washing machine. After the clothes are removed, do not lock the door of the washing machine –the drying of the drum seal is easier. Do not close the drawer for detergents completely.

Washing program	Comments concerning the type of the load	Temperature [°C]	Kg	Drum filling level	Easy Iron	ECO	Extra rinse	Quiet wash	Max. spinning rotations [rev/min]	Rough washing time [h, min]
<b>EVERYDAY 40</b>	Ideal program for small everyday portions of clothes. e.g. shirts, sports wear.	40	3,0	1/2	-	+	+	+	1000	0:42
<b>COTTON 30</b>	Lightly or medium soiled sheet linen tablecloths, linen, towels, cotton or linen shirts, etc.	30	6,0	full drum	+	+	+	+	1400	1:05
<b>COTTON 40</b>		40	6,0	full drum	+	+	+	+	1400	1:14
<b>COTTON 60</b>	Medium soiled sheet linen tablecloths, linen, towels, cotton or linen shirts, etc.	60	6,0	full drum	+	+	+	+	1400	1:45
<b>COTTON 90</b>	Heavily or medium soiled sheet linen, tablecloths, linen, towels, cotton or linen shirts, etc. Program for heavily soiled clothes. In order to obtain a better effect, it consists of the pre-wash and the main wash.	90	6,0	full drum	+	+	+	+	1400	2:09
<b>COTTON 40/90</b>		40/90	6,0	full drum	+	+	+	+	1400	2:27
<b>COTTON 60 INT</b>	Heavily soiled sheet linen, tablecloths, linen, towels, cotton or linen shirts, etc.	60	6,0	full drum	+	+	+	+	1400	2:30
<b>SHORT WASH</b>	Very short wash intended for lightly soiled fabrics.	30	2,0	1/3	-	-	+	+	1000	0:19
<b>SPIN</b>	Spin for cotton fabrics (very intense spin).	-	6,0	full drum	+	-	-	-	1400	0:10
<b>RINSE</b>	Cotton fabrics – the program serves the purpose of starching or rinsing with an addition of conditioners (e.g. anti-electrostatic agents, softeners). The spin is intense.	-	6,0	full drum	+	+	+	+	1400	0:20
<b>DRAIN</b>	Only water release – no spin.	-	6,0	full drum	-	-	-	-	-	0:02
<b>DELICATE RINSE</b>	Delicate fabrics, synthetics etc. – program serves the purpose of rinsing with an addition of conditioners [see above]. Necessary reduction of the rotations for very delicate fabrics.	-	2,0	1/3	-	+	+	+	600	0:16
<b>DELICATE SPIN</b>	Spin for delicate fabrics.	-	2,0	1/3	-	-	-	-	600	0:03
<b>DELICATE 30</b>	Washing very delicate fabrics, The program does not pump out water after the wash is finished – Stop with water. Do not leave the laundry in water for too long. Before the washed laundry is taken out, turn on the pump out program.	30	2,0	1/3	-	+	+	+	600	1:10
<b>DELICATE COLD WATER</b>		-	2,0	1/3	-	+	+	+	600	1:10
<b>WOOL 40</b>	<b>Caution!</b> Do not wash woolen clothes, which has symbols prohibiting washing in a washing machine on the label.	40	2,0	1/3	-	+	+	+	600	1:09
<b>WOOL 30</b>		30	2,0	1/3	-	+	+	+	600	1:03
<b>SYNTHETICS 60</b>	Washing lightly or medium soiled delicate synthetic clothes (t-shirts, shirts, aprons), polyester clothes (Diolene, Trevira), polyamide (Perlon, Nylon) or synthetic-cotton mixtures.	60	3,0	1/2	+	+	+	+	600	1:24
<b>SYNTHETICS 40</b>		40	3,0	1/2	+	+	+	+	600	1:03
<b>SYNTHETICS 30</b>		30	3,0	1/2	+	+	+	+	600	0:56